

## 07.6—200     Removal and installation of catalyst


---

Federal and California version model year 1977/78


### Removal

---


- 1 Loosen nuts of flange connection on exhaust manifold and screw off.

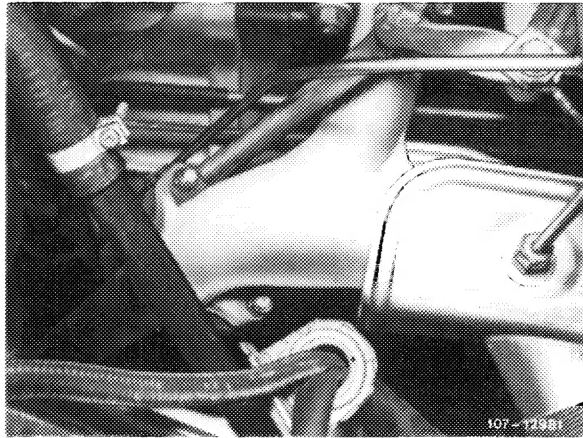

- 2 Remove heat shield panels.

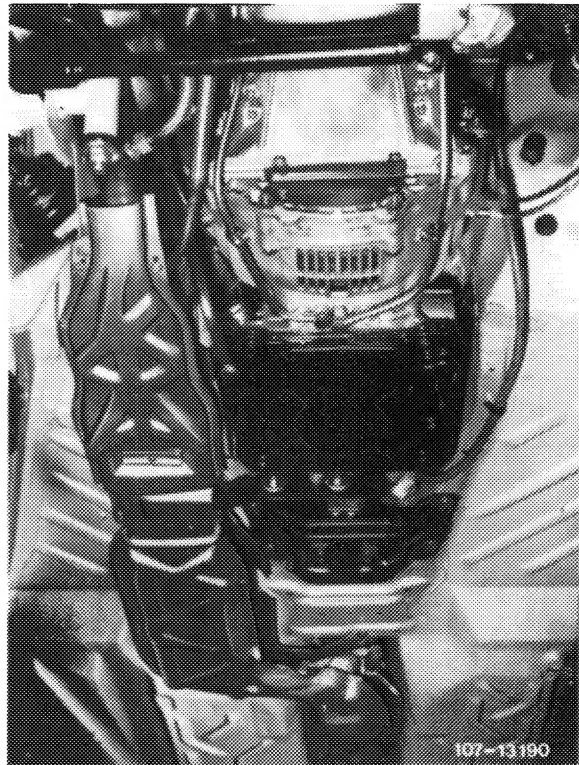

- 3 Unscrew air injection line on catalyst (76).
- 4 Remove lateral supports on transmission mount.
- 5 Take off rubber rings on resonance damper and remove exhaust system in downward direction.
- 6 Loosen clamps of plug connections of catalyst. Warm up plug connections with a welding torch and remove catalyst.

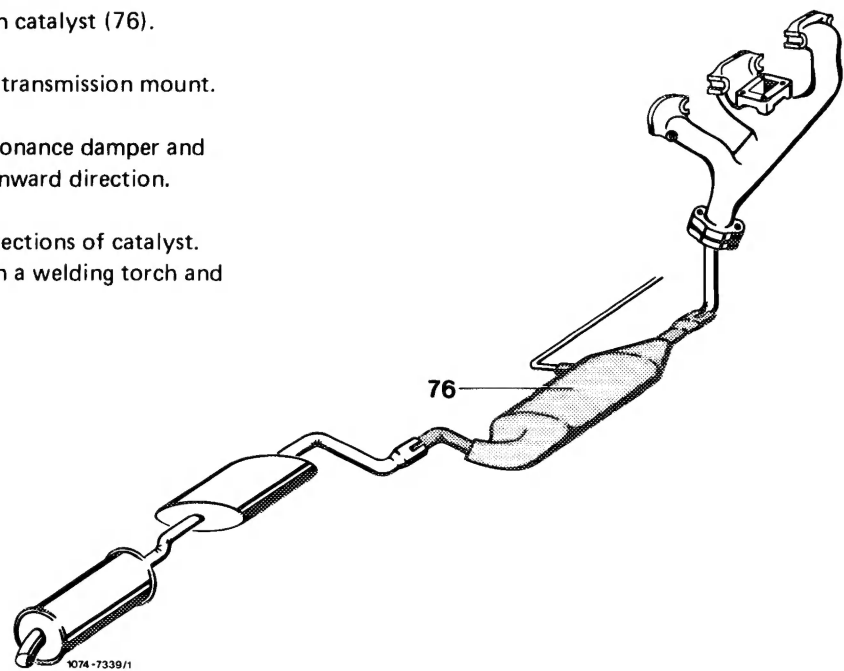

### Installation

- 7 Plug catalyst into exhaust system (replace self-locking hex nuts of clamps, as well as those of flange connection). Slightly tighten plug connections.

Install exhaust system and align.

For further installation proceed vice versa. Tightening torque of self-locking hex nuts (6) is 20 Nm (2kpm).

